

FLEET BOARD

INSTALLATION INSTRUCTIONS

CONVERSION: TP3/TP4 (CODE: J3T)

PART NUMBERS:

A 000 446 4760

A 000 446 5460

A 000 446 6960

A 000 446 7060

A 000 446 8360



TO TRUCK DATA CENTER CARD READER (250 KBIT)

PART NUMBERS: A 008 820 8426 + A 001 446 1460



+



=



Daimler Truck AG, Stuttgart, Germany

Sitz/Domicile: Stuttgart, Registergericht/Court of Registry: AG Stuttgart, HRB - Nr./Commercial Register No.: 762884

Vorsitzender des Aufsichtsrats/Chairman of the Supervisory Board: Joe Kaeser

Vorstand/Board of Management: Martin Daum, Vorsitzender/Chairman; Karl Deppen, Andreas Gorbach, Jürgen Hartwig, John O`Leary, Karin Rådström, Eva Scherer, Stephan Unger

1. check:

- before converting the Fleetboard control unit, it must be deactivated via the Fleetboard homepage (www.fleetboard.com/activate).
- control units that are not deactivated must not be converted!

2. Expansion:

- remove the Fleetboard control unit (CTP DIN) from the DIN slot.
- disconnect the power supply and antenna cable on the Fleetboard control unit (CTP DIN)
- Antenna must be replaced
(the old roof antenna may no longer be used).

3. Conversion of antenna:

a) Install adhesive antenna GSM / GPS (A 005 820 6375).

- The antenna must be attached to the edge area outside of the direct field of vision
- The antenna must be mounted with the cable exit facing downwards.
- the line of sight must be maintained.



b) Install adhesive antenna LTE (A 005 820 4675).

- The antenna must be attached inside the DIN slot



Guidelines for installing the antennas:

- LTE antenna (A 005 820 4675) must not be glued to a metal surface.
- When installing the LTE antenna, it must be ensured that the DIN device can still be removed from the DIN compartment.
- LTE antenna (A 005 820 4675) can be mounted vertically or horizontally.
- The LTE antenna (A 005 820 4675) must be at least 1.5 m away from the GSM/GPS antenna (A 005 820 6375).

4. Conversion of Fleetboard control unit:

- Insert CTP (A 001 446 1460) into the card reader (A 008 820 8426).
- Mount / connect the guide bolt and USB cable to the card reader according to the enclosed instructions.
- Connect antenna cables (3 pieces) to CTP according to color coding.
- Slide the CTP and card reader into the DIN slot using the mounting frame (A 000 542 1587).



5. installation:

- carry out the installation process as follows
 - a. switch on the ignition and wait at least 5 minutes
 - b. switch off the ignition and wait at least 5 minutes
 - c. switch on the ignition and wait at least 5 minutes

6. Installation test:

- See document test instructions on the Fleetboard homepage
Link: Fleetboard: 2G3G_Shutdown_Hardware

7. Activation:

- After successful installation of the CTP, it must be registered via the Fleetboard homepage (www.fleetboard.com/activate).

INSTALLATION INSTRUCTIONS

CONVERSION: TP3/TP4 (CODE: J3D)

PART NUMBERS:

TP3:

A 000 446 0760

TP4:

A 000 446 1060

A 000 446 3060



TO TRUCK DATA CENTER CARD READER (250 KBIT)

PART NUMBERS: A 008 820 8426 + A 001 446 1460



+



=



1. check:

- before converting the Fleetboard control unit, it must be deactivated via the Fleetboard homepage (www.fleetboard.com/activate).
- control units that are not deactivated must not be converted!

2. Expansion:

- remove the Fleetboard control unit (TP3/TP4) from the DIN slot.
- disconnect the power supply and antenna cable on the Fleetboard control unit (TP3/TP4)
- Antenna must be replaced
(the old roof antenna may no longer be used).

3. Conversion of antenna:

a) Install adhesive antenna GSM / GPS (A 005 820 6375).

- The antenna must be attached to the edge area outside of the direct field of vision
- The antenna must be mounted with the cable exit facing downwards.
- the line of sight must be maintained.



b) Install adhesive antenna LTE (A 005 820 4675).

- The antenna must be attached inside the DIN slot



Guidelines for installing the antennas:

- LTE antenna (A 005 820 4675) must not be glued to a metal surface.
- When installing the LTE antenna, it must be ensured that the DIN device can still be removed from the DIN compartment.
- LTE antenna (A 005 820 4675) can be mounted vertically or horizontally.
- The LTE antenna (A 005 820 4675) must be at least 1.5 m away from the GSM/GPS antenna (A 005 820 6375).

4. Conversion of Fleetboard control unit:

- Insert CTP (A 001 446 1460) into the card reader (A 008 820 8426).
- Mount/connect the guide bolt and USB cable to the card reader according to the enclosed instructions.
- Connect antenna cables (3 pieces) to CTP according to color coding.
- Connect the adapter cable (A 058 545 4028) to the cable existing in the vehicle and plug it onto the CTP (A 001 446 1460).
- Slide the CTP and card reader into the DIN slot using the mounting frame (A 000 542 1587).



5. Installation:

- carry out the installation process as follows
 - a. switch on the ignition and wait at least 5 minutes
 - b. switch off the ignition and wait at least 5 minutes
 - c. switch on the ignition and wait at least 5 minutes

6. Installation test:

- See document test instructions on the Fleetboard homepage
Link: Fleetboard: 2G3G_Shutdown_Hardware

7. Activation:

- After successful installation of the CTP, it must be registered via the Fleetboard homepage (www.fleetboard.com/activate).